


Name: PVC 100% Waterproof Front / End Bath Panel

Front Panel




End Panel

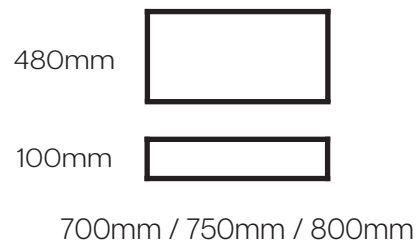

Panel Thickness




15mm

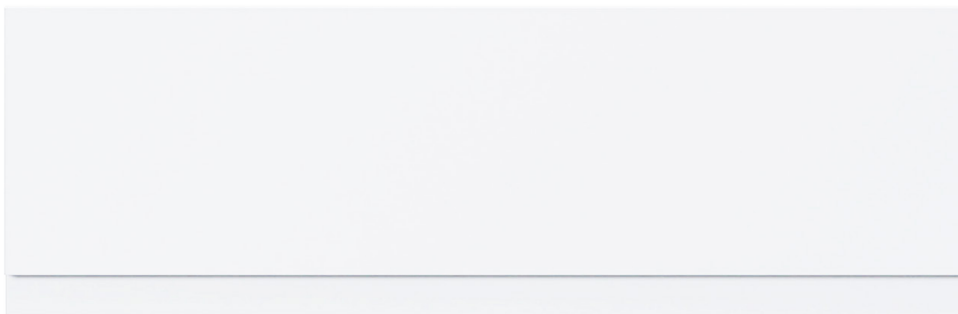


Gloss White

Ral Code: 9010

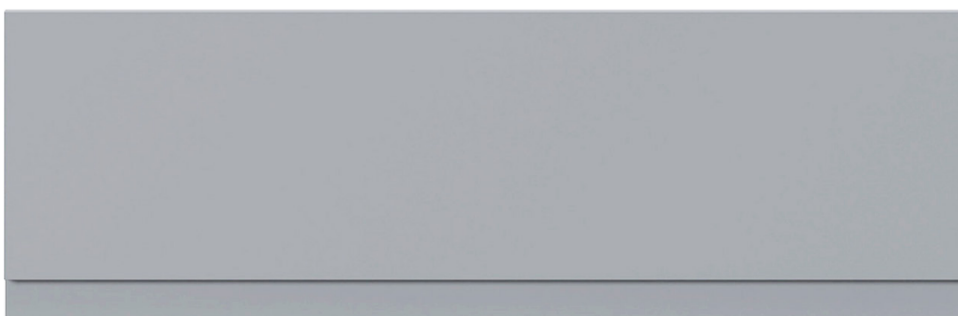

Gloss Light Grey

Ral Code: 7040

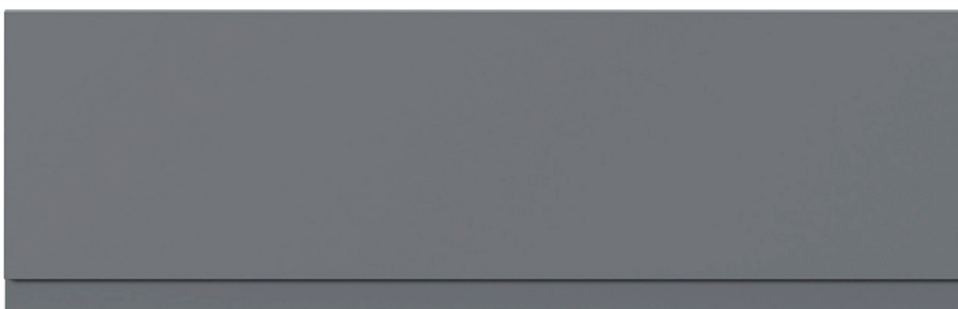

Gloss Dark Grey

Ral Code: 7015



A

480MM

FRONT PANEL

100MM

PLYNTH

480MM - 550MM

FRONT PANEL

PLYNTH

B

END PANEL

PLYNTH

PANEL SIZE:	A	B
1600MM	✓	X
1700MM	✓	X
1800MM	✓	X
700MM	X	✓
750MM	X	✓
800MM	X	✓
900MM	X	✓

MEASURE THE HEIGHT THAT THE PANEL NEEDS TO BE FROM UNDER THE BATH RIM TO THE FLOOR.

DRILL EQUALLY SPACED HOLES ALONG THE PLINTH AND SCREW TO THE BOTTOM OF THE FRONT PANEL AT THE DESIRED HEIGHT USING THE SCREWS PROVIDED.

IT IS ADVISABLE TO BUILD A FRAME OR PLACE BATTENS ALONG THE FLOOR AND DOWN THE WALLS TO SUPPORT THE PANEL.

WHEN AN END PANEL IS USED IT IS NECESSARY TO TRIM THE PLINTHS SO THAT THE FRONT AND END PANELS CAN BUTT TOGETHER, ANY TRIMMINGS SHOULD BE DONE AT THE WALL ENDS TO ENSURE THAT THE FINISHED EDGE IS AT THE VISABLE CORNER.

FRONT AND END PANELS ARE FASTENED TOGETHER USING THE SCREWS AND CORNER BRACKETS PROVIDED.

